


Post date:

Saturday, July 26, 2014 - 19:51

Last modified:

Sunday, December 14, 2014 - 14:20

Data Sheet: <http://ww1.microchip.com/downloads/en/DeviceDoc/20001203U.pdf>

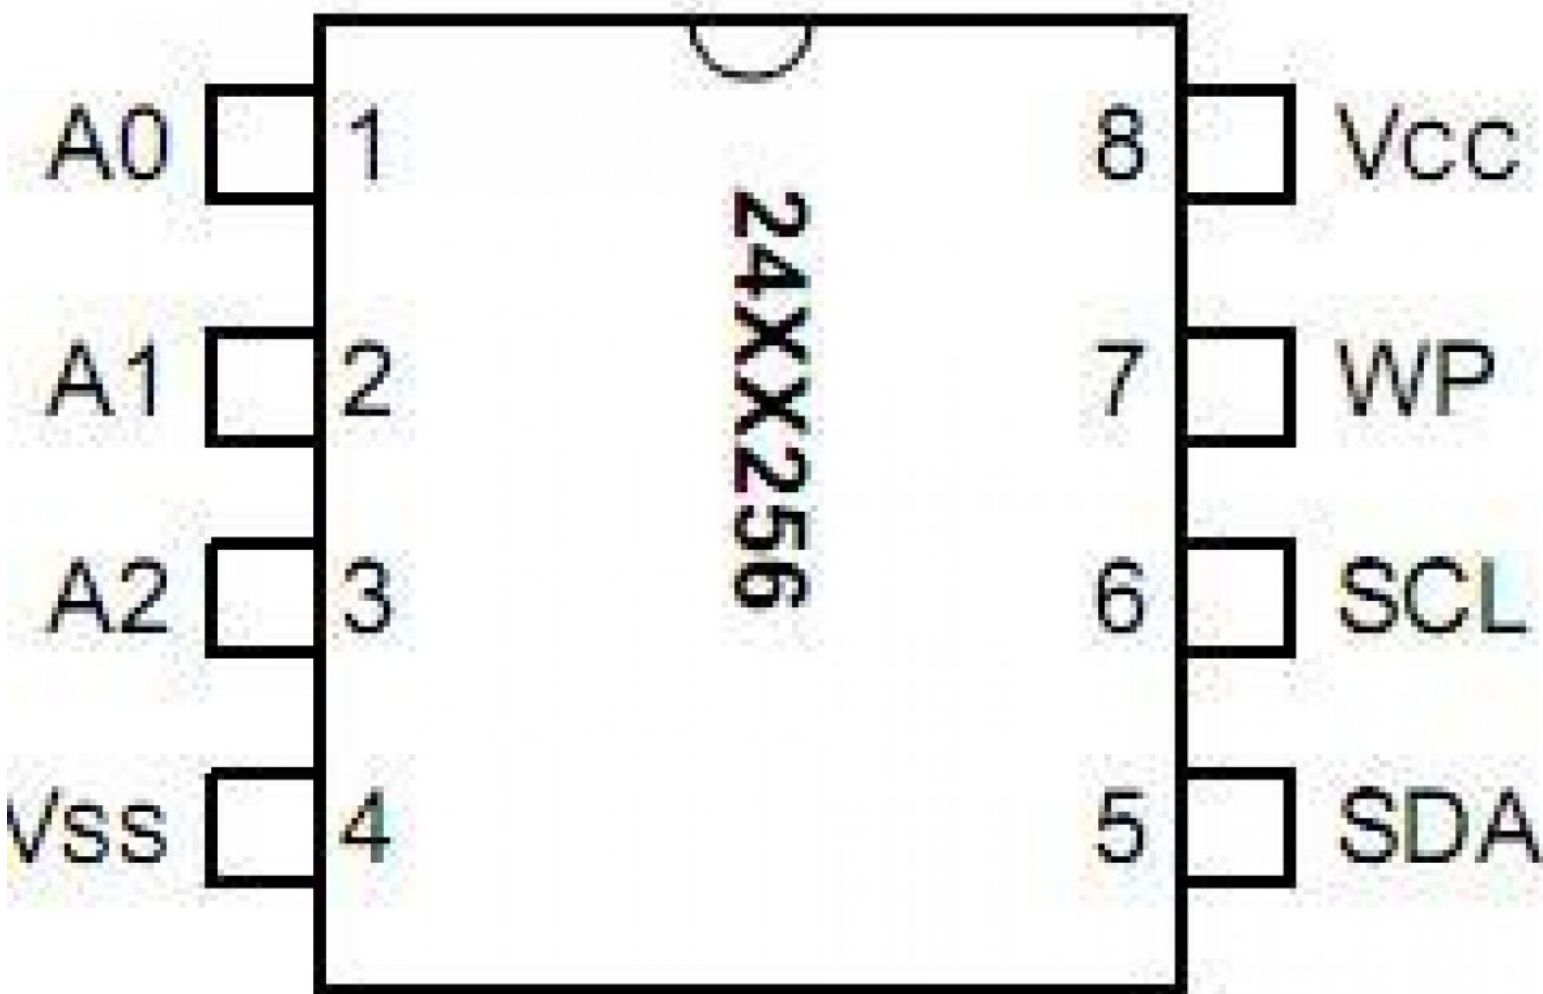

VSS = Ground

Part Number	VCC Range	Max. Clock Frequency
24AA256	1.7-5.5V	400 kHz (1)
24LC256	2.5-5.5V	400 kHz
24FC256	1.7-5.5V	1 MHz (2)


Note 1: 100 kHz for VCC < 2.5V.

Note 2: 400 kHz for VCC < 2.5V.

**Setting the Slave Address:**

A0, A1 and A2 to GND - which makes your slave address 1010[000]0 or 0x50 in hexadecimal.

### Binary to Hexadecimal Converters

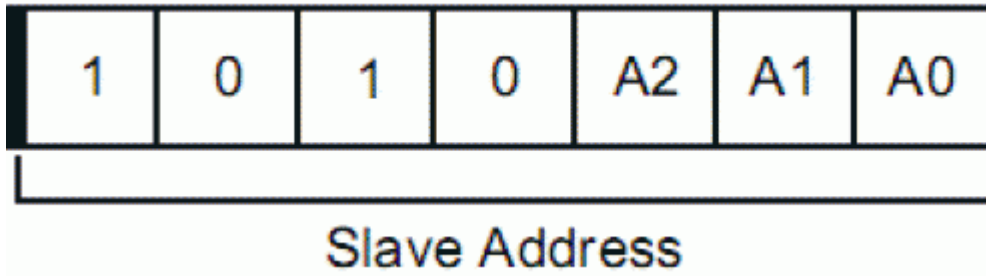

Mobile QR Barcodes:

#### Save Article as PDF



#### Current URL Address



### Other site pages which link here:

- [MINI NC Controller for Z-axis: CMOS Memory](#)

Category:

[Electronics](#)

Tags:

[Arduino](#)

[Microchip](#)

-  [Save page as PDF](#)